


Dewdrop™ v.2 Diffuser

OPERATION MANUAL

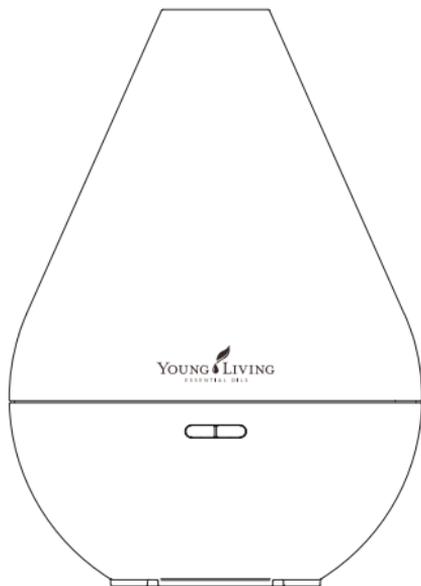

YOUNG LIVING®
ESSENTIAL OILS

Overview



Young Living's Dewdrop™ v.2 Diffuser functions as a humidifier, atomizer, and aroma diffuser in one simple-to-use product. Inspired by the purity and elegance of a drop of morning dew, the Dewdrop Diffuser's design reflects Young Living's dedication to providing high-quality essential oils. Its ultrasonic technology breaks any mixture of essential oils and water into millions of microparticles, disperses them into the air, and releases the constituents found in Young Living essential oils. Custom designed with up to five hours of continuous run and ten hours of intermittent run diffusion with automatic shut-off, and ambient light control. Young Living's Dewdrop Diffuser can transform any space into a spa-like atmosphere.

Transform your surroundings: The ultrasonic frequency generates waves at 1.7 million times per second, releasing essential oil molecules into the air to help create a relaxing, spa-like atmosphere in your home or office.

Contents


Dewdrop v.2 Diffuser, 1 AC power adaptor, and 1 operation manual

Diagram

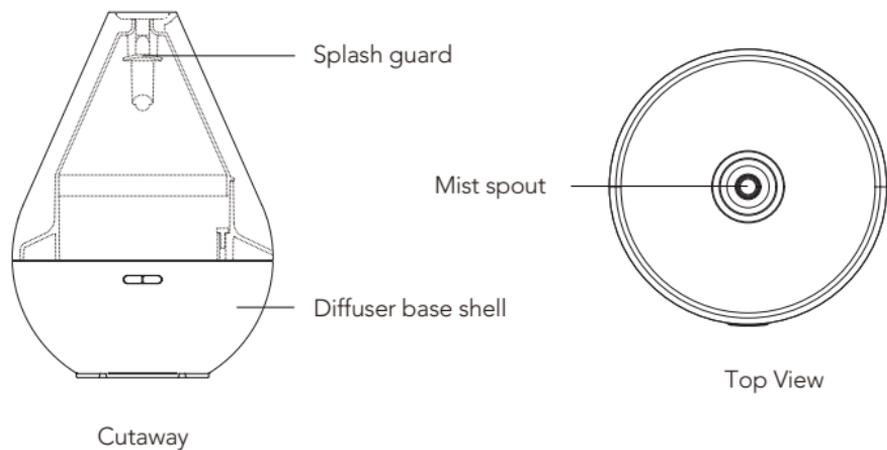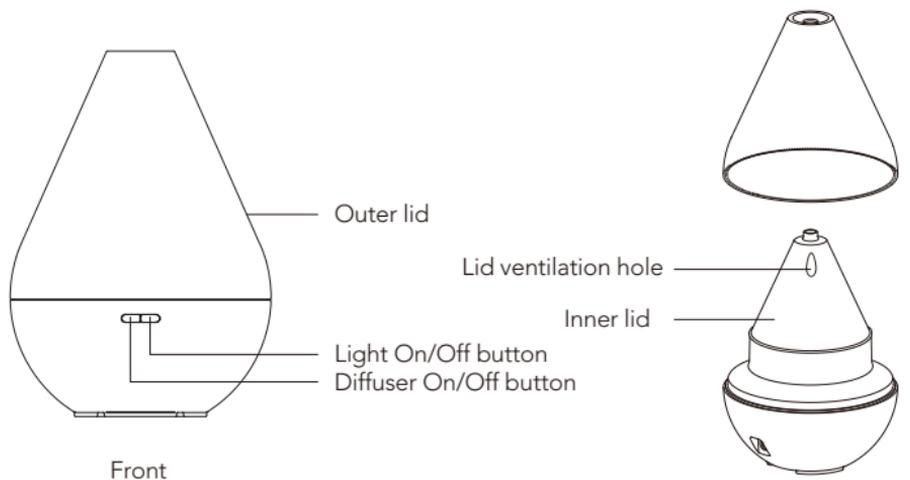


Diagram

Red water fill line marker
Water reservoir
Base ventilation hole
Ultrasonic plate

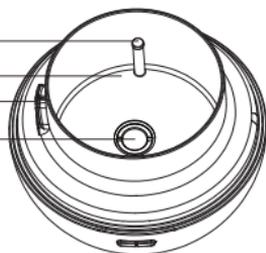


Diffuser Base

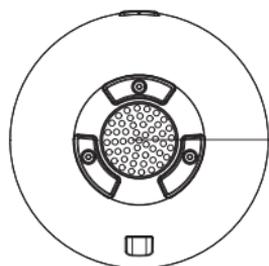


Fan intake

Bottom

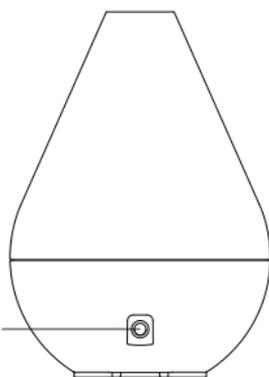

DC power inlet

Back

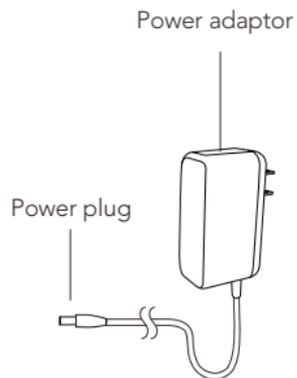

Power adaptor

Power plug

Operating Instructions



1



2




3




4


1. Remove both outer and inner lids.
2. Add water until level reaches, but does not exceed, the red water fill line marker.
3. Add 8-10 drops of essential oil.
4. Replace both lids back onto the unit.

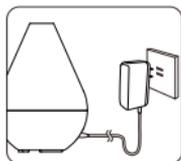

5

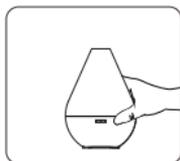


6

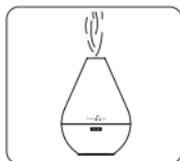

7

5. Plug the power adaptor into a power outlet.
6. Press the On/Off button to switch on.
7. The unit should produce mist, and the LED light should be on.

Functionality

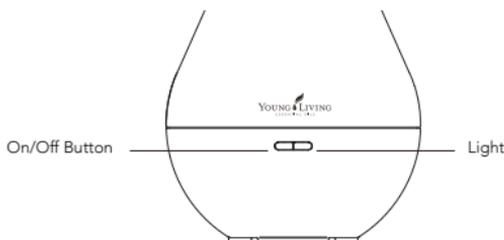

On/Off Button

- Press 1 time to turn the unit on in High output mode. The default white light will turn on. The maximum continuous run time is approximately 4 to 5 hours. The unit will shut off automatically when the water reservoir is empty. Run time may vary based on essential oil type and number of drops used.
- Press 2 times for Low output mode. The maximum run time is approximately 8 hours.
- Press 3 times for Intermittent output mode. The maximum run time is approximately 10 hours. (One minute on/One minute off)
- Press 4 times to turn off the unit.

Light

While unit is running in default mode,

- Press light button 1 time for dim white light.
- Press 2 times for candle-like flicker.
- Press 3 times to cycle through 7 color options on a 5-second delay, starting with red.
- Press 4-10 times to manually select individual color options: red, orange, yellow, green, light blue, blue, lavender.
- Press 11 times to turn the light off.
- You can turn off light at any time by pressing and holding light button for 3 seconds.
- To run the light independently from the diffuser (night-light mode), press and hold the On/Off button for 3 seconds when the unit is off, and the light will turn on. There is no need to have water in the reservoir.

Control the light modes with the light control button as listed above.


Safety and Care Instructions

Please read and follow these safety guidelines closely to ensure safe operation of the diffuser.


- Unplug the diffuser immediately and discontinue use in the event of smoke or a burning smell.
- **Use room-temperature tap, spring, or distilled water.**
- Never wrap the adaptor with cloth, paper, etc. Such actions may result in damage to the diffuser or fire.
- Never touch the adaptor with wet hands; electric shock or injury may occur.
- Do not disassemble or attempt to repair the diffuser; this will void the warranty.
- Never immerse the diffuser in water.
- Unplug the adaptor when refilling, cleaning, or moving the diffuser.
- Keep the diffuser out of reach of children.
- Do not remove or place objects in the water reservoir during operation.
- Do not place your fingers in the water during operation; this may result in injury.
- Do not place acidic or alkaline chemicals in the reservoir.
- Use only the included power adaptor provided in the packaging or by Young Living.
- Do not shake the diffuser.
- Any damage caused by the user does not qualify for replacement by Young Living.
- Do not use metal objects to clean the ultrasonic plate; use only a cotton swab or cloth dipped in rubbing alcohol or a neutral detergent.

- Never use the product for purposes other than those listed in this manual.
- If the unit will not be used for an extended period or needs to be relocated, unplug the power adaptor, empty the water reservoir, and wipe the unit clean before storage.
- Clean the unit before switching to different essential oils.
- Use only 100-percent pure, natural essential oils. Artificial, synthetic, or impure oils and fragrances can cause harm to the unit.
- The water reservoir level should not exceed the red water fill line marker.
- When unplugging the power adaptor, pull from the adaptor plug instead of pulling the wire.
- Avoid placing the product under direct sunlight, close to a refrigerator or fan, or in a hot environment.

Cleaning and Maintenance

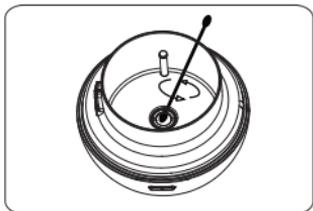

Notice:
When emptying the water reservoir, pour water from the opposite side of the base ventilation hole.

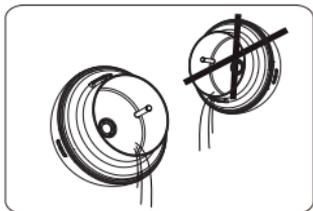

Always turn off and unplug the diffuser prior to cleaning. To ensure proper performance, clean the ultrasonic plate and lid after each use. If essential oil begins to build up on the ultrasonic plate, gently wipe it off using a cotton swab dipped in rubbing alcohol. If essential oil begins to build up on the lid, gently wipe it off using mild soap and water only. Never use a corrosive detergent to clean the ultrasonic plate or damage will occur. Periodically check under the diffuser to keep the fan intake free of debris. Debris can be removed by blowing on the fan intake opening or wiping with a clean, dry cloth. (Do not use aerosol sprays, solvents, or abrasives to clean the plastic housing.) When not in use, clean the diffuser and store dry. Replacement ultrasonic plates can be purchased from Young Living.

Troubleshooting

When switched on, the diffuser does not operate. (Potential issues: power connection, water above water fill line marker)

- Check that the adaptor is securely plugged into the wall socket and the rear of the diffuser.
- Check that water is in the reservoir and it is not above the red water fill line marker. If there is too much water, unplug the unit and adjust the water to the red water fill line marker and restart. The light should come on, and the diffuser should mist.

There is no mist or less mist than usual. (Potential issues: water above fill line, oil buildup on the ultrasonic plate, ultrasonic plate has stopped working, fan vents or mist spouts are obstructed, fan is not working)

- Unplug the diffuser before performing the following procedures.
- Check the water level. If the water is above the water fill line, carefully pour out the excess water from the opposite side of the base ventilation hole.
- With outer lid in place, verify that the mist spout holes, on the outer lid and the inner lid, are clear and free from any debris.
- Check for essential oil buildup on the ultrasonic plate. If oil buildup is present, follow the cleaning instructions. The ultrasonic plate must be free of residual oil buildup for the diffuser to operate properly. Replacement ultrasonic plates can be purchased from Young Living.
- Check that the fan intake under the diffuser is free of any obstruction or debris that may restrict air flow. (After the diffuser is on, you should hear the fan.)
- Refill the water reservoir to the water fill line marker and restart. If it still does not mist, you might need to replace the ultrasonic plate. If necessary, before you install the outer lid, remove the inner lid while the diffuser is on and verify if the water is bubbling. If the water is bubbling, the ultrasonic plate is working. If the water is not bubbling, replace the ultrasonic plate.

The light does not work. (Potential issue: power connection)

- Press the On/Off button to verify that the light is functioning. If the light does not work, call Member Services for further instructions.

Water is leaking from the unit. (Potential issue: inner lid is not properly seated)

- Verify that the inner lid is in place. If the external air temperature is very low or there is a high level of humidity in the air, the diffuser mist may condense into water droplets.

**When switched on, the light flashes once then shuts off.
(Potential issue: no water in diffuser)**

- The unit is not registering any water in the diffuser. Check that water is in the reservoir and is not above the water fill line marker. If there is too much water, unplug the diffuser and adjust the water to the water fill line marker and restart.

Specifications

Product Name:	Dewdrop v.2 Diffuser
Item No.:	PZ-UA109
Dimensions:	135 mm height x 190 mm diameter
Material:	Polypropylene (PP)
Weight:	11.47 oz. (325 g)
Power Source:	DC24V 500mA
Power:	12W / soft LED light
Atomized Particle Diameter:	5 μ m
Water Type:	Room-temperature tap, spring, or distilled water
Container Capacity:	180 ml
Coverage Area:	30 sq. m.
Diffusion Run Time:	4-5 hours in High output mode (auto shut-off when water reservoir is empty)
Ultrasonic Frequency:	1.7 million waves per second
Environment:	Indoor

Young Living Diffuser Warranty

Young Living Essential Oils (YLEO), Thanksgiving Point Business Park, 3125 Executive Parkway, Lehi, Utah 84043, subject to the exclusions contained below, warrants its diffuser to be free from defects in materials and workmanship under normal consumer usage for a period of 12 calendar months from the date of original purchase.

This Warranty Does Not Cover:

1. Defects or damage resulting from use of the product in other than its normal and customary manner;
2. Defects or damage from misuse, accident, or neglect;
3. Defects or damage from use of natural oils other than those supplied or sold by Young Living Essential Oils or an authorized distributor;
4. Defects or damage from use of materials other than essential oils;
5. Defects or damage from improper testing, operation, maintenance, installation, adjustment, or any alteration or modification of any kind;
6. Breakage or damage caused by use of other than the specified voltage;
7. Products disassembled or repaired by anyone other than a Young Living Essential Oils' authorized agent so as to adversely affect performance or prevent adequate inspection, verification, and testing to verify any warranty claim. If there are any signs the diffuser had been opened, the warranty will be void;
8. Products with labels removed or illegible serial numbers;
9. Marring such as scratches on any plastic surfaces and externally exposed parts resulting from normal use;
10. Damage resulting from normal wear and tear; and/or
11. Damage resulting from the use of metal tools to clean the unit.

This limited warranty is the buyer's exclusive remedy, applies to new diffusers purchased from Young Living Essential Oils, and is non-

transferable. Please retain your original purchase receipt. In the event of a warranty claim or return for repair, a copy of the purchase receipt should accompany the diffuser when shipped to YLEO. To make a warranty claim or to purchase spare parts, please contact the Young Living Member Services Department at 1.800.371.3515 (6 a.m.–8 p.m., MT, M–F and 7 a.m.–5 p.m., MT, Saturday). If it is determined by Member Services that the diffuser is to be shipped back to YLEO, the buyer will need to send the product back in its original box (if available) with the power adaptor, a copy of the original purchase receipt, and the YLEO Return Merchandise Authorization (RMA)# (displayed clearly on the receipt), which will be provided by Member Services.

U.S. Shipping:

Young Living Essential Oils Returns/ RMA# _____
142 East 3450 North
Spanish Fork, UT 84660

For all other market address and contact information, visit YoungLiving.com.

NOTICE:

Please be sure to complete the YLEO return form and send back all the items listed for timely processing of your return. If YLEO has determined, based on an evaluation and inspection of the diffuser, that the defect or malfunction is covered under warranty, YLEO will send a replacement diffuser at no additional charge.

Manufacturer:

Puzhen Life Co., Ltd
www.puzhen.com

Unit 1112-1116, 11/F, Delta House, 3 On Yiu Street, Shatin, Hong Kong
Dew Drop v.2 Diffuser PZ-UA109
DC 24V 0.5A



CAN ICES-1/NMB-1

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CAN ICES-1/NMB-1

This ISM device complies with Canadian ICES-001.

This device complies with part 18 of the FCC Rules

(a) The interference potential of device or system:

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

(b) Maintenance of the system:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

(c) Simple measures that can be taken by the user to correct interference:

NOTE: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



3125 Executive Parkway
Lehi, UT 84043
www.YoungLiving.com